# PCIe TO M.2(NGFF)+1SATA6G (HDD/SSD)

User Manual Ver. 1.00

# **Features**

- Increase system overall performance by combining a small capacity high performance M.2 SATA SSD and a low cost high capacity hard driver
- Maximum 6Gbits/sec\*
- · Port Multiplier Compatible
- Hot swappable
- · Install into standard height or low profile system
- · Compatible with any SATA I, II or III hard drive
- NCQ support
- · SATA III max transfer rate of 6.0Gbps\*
- · M.2 specification revision 0.9
- · Serial ATA Spec. Reversion 3.2
- Supports M.2 card size: 22\*30, 22\*42, 22\*60, 22\*80, 22\*110
- Supports M.2 B Key Card Type

Note: Support M.2(NGFF) SATA SSD

The efficiency mainly depends on M.2(NGFF) SSD master IC and the size of the capacity

# **Package Contents**

- 1 × PCI-e TO M.2+1SATA6G Card
- 1 × User Manual
- 1 × Driver CD
- 1 x SATA Cable
- 2 × Screws(M.2)

Note: Contents may vary depending on country/market.

# System Requirements

- Windows 2000/XP/2003/2008/Vista/7/8
- Linux, MAC OS

# **Driver Installation**

## For Windows(R) XP/Server 2003 (32bit)

#### For A New Windows Installation

A new installation requires a floppy disk for the driver installation. To make this floppy disk, copy the contents of the "Marvell\91XX\Driver\miniport\Floppy32" folder found on the driver CD, onto a blank floppy disk then follow the directions below.

- Follow Microsoft's Windows installation procedure.
- 2. At the Windows Setup screen, press F6 to install the driver.
- 3. When prompted, press S to specify the location of the driver.

- 4. Insert the floppy disk, and then press Enter.
- 5. Scroll to Marvell shared library (install first) using the arrow keys and press Enter to select.
- 6. Press S again to select the second device.
- 7. Scroll to Marvell 9128 SATA Controller 32bit Driver and press Enter to select.
- 8. Press Enter to complete the installation of drivers.
- 9. Continue with the Windows OS installation.

#### For An Existing Windows Installation

- 1. Please insert the driver CD bundled with PCIe SATA 6G Card into your CD-ROM Drive.
- 2. At the Windows desktop, click Start, and then Run.
- 3. Type D:\Marvell\9128\Driver\drvSetup.exe, click OK. (Change D:\to match your CD-ROM drive letter)
- 4. Follow the on-screen instructions to complete the installation.
- Restart Windows to complete the installation.

## For Windows(R) XP/Server 2003(64bit)

#### For A New Windows Installation

A new installation requires a floppy disk for the driver installation. To make this floppy disk, copy the contents of the "Marvell\9128\Driver\miniport\Floppy64" folder found on the driver CD, onto a blank floppy disk then follow the directions below.

- 1. Follow Microsoft's Windows installation procedure.
- 2. At the Windows Setup screen, press F6 to install the driver.
- 3. When prompted, press S to specify the location of the driver.
- Insert the floppy disk, and then press Enter.
- 5. Scroll to Marvell shared library (install first) using the arrow keys and press Enter to select.
- Press S again to select the second device.
- 7. Scroll to Marvell 9128 SATA Controller 64bit Driver and press Enter to select.
- 8. Press Enter to complete the installation of drivers.
- 9. Continue with Windows OS installation.

## For An Existing Installation

- 1. Please insert the Driver CD bundled with PCIe SATA 6G Card into your CD-ROM Drive.
- 2. At the Windows desktop, click Start, and then Run.
- 3. Type D:\Marvell\9128\Driver\drvSetup.exe, click OK. (Change D:\to match your CD-ROM drive letter)
- 4. Follow the on-screen instructions to complete the installation.
- 5. Restart Windows to complete the installation.

# For Windows(R) 7/Vista (32bit)

#### For A New Windows Installation

- 1. Follow Microsoft's Windows installation procedure.
- 2. At the Windows Setup screen, press Load Driver to install the driver.
- Insert the Driver CD bundled with PCle SATA 6G Card into your CD-ROM Drive, please select Marvell 9128 SATA 6G Controller (D:\Marvell\9128\Driver\miniport\Floppy32\mv91xx.inf), then press Next. (Change D:\to match your CD-ROM drive letter)

4. Continue with Windows OS installation.

#### For An Existing Installation

- 1. Please insert the Driver CD bundled with PCIe SATA 6G Card into your CD-ROM Drive.
- 2. At the Windows desktop, click Start, and then Run.
- 3. Type D:\ Marvell\9128\Driver\drvSetup.exe, click OK. (Change D:\to match your CD-ROM drive letter)
- 4. Follow the on-screen instructions to complete the installation.
- 5. Restart Windows to complete the installation.

## For Windows(R) 7-x64/Vista-x64

### For A New Windows Installation

- 1. Follow Microsoft's Windows installation procedure.
- 2. At the Windows Setup screen, press Load Driver to install the RAID driver.
- Insert the Driver CD bundled with PCIe SATA 6G Card into your CD-ROM Drive, please select Marvell 9128 SATA 6G Controller (D:\Marvell\9128\Driver\miniport\Floppy64\mv91xx.inf), then press Next. (Change D:\to match your CD-ROM drive letter)
- 4. Continue with Windows OS installation.

#### For An Existing Installation

- 1. Please insert the Driver CD bundled with PCIe SATA 6G Card into your CD-ROM Drive.
- 2. At the Windows desktop, click Start, and then Run.
- 3. Type D:\Marvell\9128\Driver\drvSetup.exe, click OK. (Change D:\to match your CD-ROM drive letter)
- 4. Follow the on-screen instructions to complete the installation.
- 5. Restart Windows to complete the installation.

# To Verify Driver Installation

- 1. Right click My Computer and click Manage.
- 2. Select Device Manager.
- 3. Look for the following:

Windows(R) XP/2003: Double click SCSI and RAID controller:

-Marvell 91xx SATA 6G Controller should be displayed

Windows(R) Vista/7: Double click Storage controllers:

-Marvell 91xx SATA 6G Controller should be displayed